

USER MANUAL



PACKTALK-S EN





CONTENTS

1. Introduction	3
2. Getting Started	4
2.1 Getting to Know Your PACKTALK-S	4
2.2 Charging Your PACKTALK-S	4
2.3 Switching Your PACKTALK-S On/Off	5
2.4 Using Your PACKTALK-S	5
2.5 Pairing Your PACKTALK-S to Bluetooth Devices	5
3. Cardo Connect App	7
3.1 Registering Your PACKTALK-S	7
3.2 Updating Your PACKTALK-S	8
4. On the Road	10
4.1 Basic Audio Functions	10
4.2 Making and Receiving Phone Calls	10
4.3 Streaming Music	12
4.4 Listening to FM Radio	13
4.5 Voice Commands	15
5. Riding with Others	17
5.1 DMC Intercom	17
5.1.1 Setting Up and Using DMC Intercom Groups	17
5.2 Using DMC Intercom	19
5.3 Adding a non-DMC Passenger	19
5.3.1 Chatting Privately	19
5.3.2 Muting/Unmuting DMC Intercom Groups	20
5.3.3 TO start/stop sharing a call:	20
5.3.4 Multiple audio sources and volume Management	20
5.4 Bluetooth Intercom	21
5.4.1 Setting Up non-DMC Intercom	21
5.4.2 Using the Bluetooth intercom	23
5.5 Sharing Music	24
5.6 Switching between Intercom modes	24
6. Troubleshooting	26
6.1 Soft Reset	26
6.2 Reset to Factory Settings	26
6.3 FAQ	26
7. Personalizing Your Device	27
7.1 Using Parallel Audio Streaming	27
8. Support	28



1. INTRODUCTION

Thank you for choosing the Cardo PACKTALK-S communication and entertainment system for Shoei gen 3 helmets (neo-tec 3, GT-air 3 and J-cruise 3) motorcycle helmets.

We wish you a great PACKTALK-S experience and encourage you to visit the [support page](#) regarding any questions, suggestions or comments you may have.

If you have not yet installed the PACKTALK-S unit on your helmet Shoei helmets, please install it as described in the Installation Guide provided in the package. You can also watch the installation video accessible on this [link](#).

For easy reference while on the road, download the Pocket Guide [here](#).


Before using your unit for the first time, download the Cardo Connect App and follow the on-screen instructions to update your PACKTALK-S to the latest software.

This is version 1.0 of the PACKTALK-S Manual. The latest version of the manuals in your preferred language and various tutorials can be found [here](#).



2. GETTING STARTED

2.1 GETTING TO KNOW YOUR PACKTALK-S

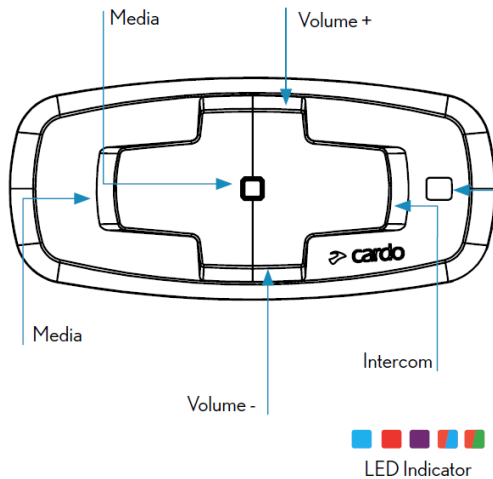


2.2 CHARGING YOUR PACKTALK-S

Make sure that your PACKTALK-S charged for at least 4 hours before initial use.

To charge the unit:

1. Using the supplied USB cable, connect your computer or wall charger to the USB on your PACKTALK-S.

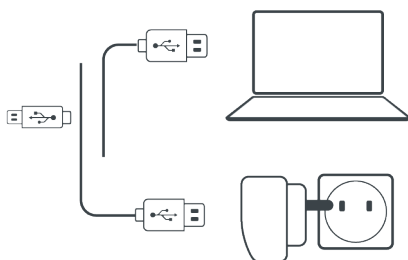

2. Fast charging:
 - You will have 2 hours of talk time after 20 minutes of charging (1.5 - 2 hours are needed for full charge).

3. Charge while riding:

In case you need to charge it, connect your unit to a power outlet. You can continue charging while riding.

The battery of your PACKTALK-S supports up to 13 hours of talk-time.



While charging, the LED indicates the charging status as follows:


- Red LED on — charging
- Red LED off — charging complete

TIP: You can check the battery charge at any time in the Cardo Connect App, or by saying "**Hey Cardo, battery status**".

2.3 SWITCHING YOUR PACKTALK-S ON/OFF

To switch your **PACKTALK-S** on:

- Tap the **Media** and **Intercom** buttons **once**.

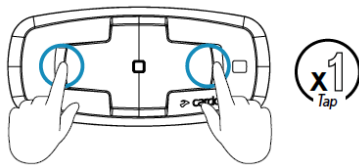


The speaker plays a startup sound.

- Normal battery — LED flashes blue once, then green
- Low battery — LED flashes blue three times, then green
- Charging — LED flashes red and green

To switch your **PACKTALK-S** off:

- Tap the **Media** and **Intercom** buttons **once**.

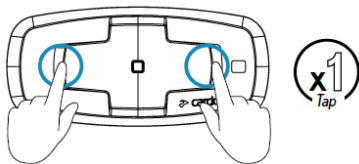

The LED flashes red three times, confirming that your unit is switching off. The speaker plays a sound and a voice message indicates the battery status, "Battery Status X%".

2.4 USING YOUR PACKTALK-S

You can operate the various features of your **PACKTALK-S** in the following ways:

- Press a button or a combination of buttons on the unit.
- Use the Cardo Connect App on your mobile device (once it is paired with the unit).
- Use natural voice operation (by saying a command, for example "**Hey Cardo, Radio On**").

2.5 PAIRING YOUR PACKTALK-S TO BLUETOOTH DEVICES

Your **PACKTALK-S** has two Bluetooth channels for connection to Bluetooth devices such as mobile phones, GPS devices, and TFT Bike Infotainment.




To connect your PACKTALK-S to a Bluetooth device, you must first pair them. Once paired, they automatically recognize each other whenever they are within range.

- If you are pairing the unit to more than one mobile phone, the phone paired with channel 1 is the default phone for outgoing calls.

To pair to a mobile phone:

1. Enable Bluetooth on your mobile phone.
2. On the unit in standby mode, press the middle **Media** button for **5** seconds.

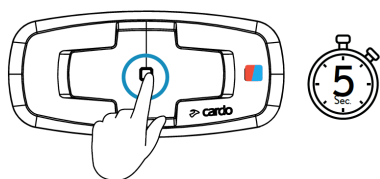

The LED flashes red and blue.


3. On your mobile phone, search for Bluetooth devices.
4. When your PACKTALK-S appears in the list of available devices, select it.
If prompted for a PIN or Passkey, enter 0000 (four zeros). If prompted to allow pairing on your phone, allow it.



The phone confirms that pairing has succeeded and the LED flashes purple for 2 seconds. A voice message confirms "Phone connected".

To stop phone pairing:

- Press the middle **Media** button for **5** seconds.

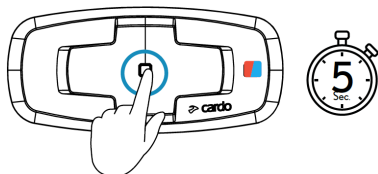



3. CARDO CONNECT APP

The Cardo Connect App enables you to configure the settings of your PACKTALK-S. In addition, the App offers you remote controlled operation from the screen of your smartphone.

3.1 REGISTERING YOUR PACKTALK-S

In order to use your PACKTALK-S you first need to activate it. Activation is through the App.


1. Download the Cardo Connect App.



2. Register your PACKTALK-S.



3. Activate your unit.

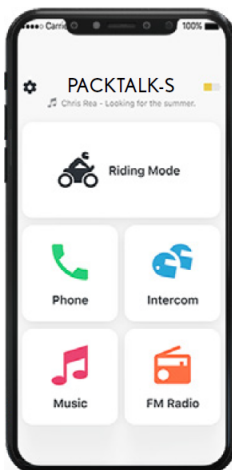



4. Select your language.



3.2 UPDATING YOUR PACKTALK-S


Before using your PACKTALK-S for the first time, and whenever a new software update is available, make sure to have the latest software update. Updating with the latest software keeps your unit free of bugs and provides you with additional new functionality.

Your PACKTALK-S can be updated Over the Air, via the Cardo Connect app.

To update your PACKTALK-S with the Cardo Connect App:

Whenever a new software update is available, a pop-up will open on your App screen. Select and follow the on-screen instructions.

If you select **Remind me later**, the pop-up will re-open the next day.

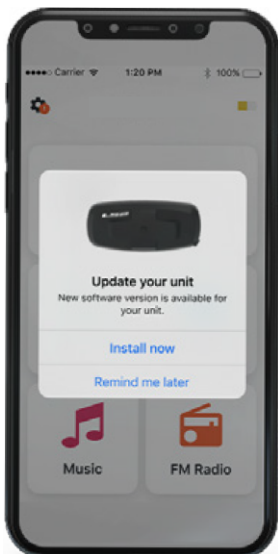

To manually update your PACKTALK-S:

1. Open the Cardo Connect app.



2. Select **Settings**.
3. Select your unit.
4. Select the software version.
5. Select **Update now**.

When the update is finished, select **Finish** to go back to the main screen.

To update your PACKTALK-S unit with your computer:

1. Download and install the Cardo Update tool <https://www.cardosystems.com/update>.
2. Open Cardo Update.
3. Register (first time only).
4. Connect the unit to the computer using an USB cable and update the firmware.

Cardo Update on Windows/Mac - minimum requirements - Windows® 7/macOS x10.8.



4. ON THE ROAD


PACKTALK-S makes it easy for you to receive phone calls and listen to music in a convenient and safe manner.

4.1 BASIC AUDIO FUNCTIONS

The basic audio functions are the same whether you are listening to music, speaking on the intercom, or having a phone conversation.

To turn the volume up:


- Tap **Volume +** to increase the volume or say "**Hey Cardo, volume up**".

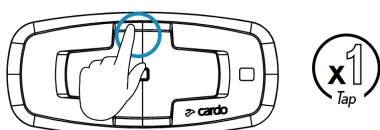

An increasingly louder tone is played on the speaker until you reach the maximum volume, as indicated by the maximum volume tone.

To turn the volume down:


- Tap **Volume -** to reduce the volume or say "**Hey Cardo, volume down**".

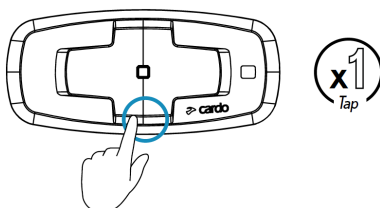

An increasingly quieter tone is played on the speaker until you reach the minimum volume, as indicated by the minimum volume tone.

To mute / unmute the microphone:

- Press the **Volume -** button for **2 seconds** or say "**Hey Cardo, mute audio**"/"**Hey Cardo, unmute audio**".

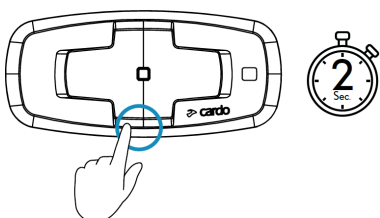

4.2 MAKING AND RECEIVING PHONE CALLS


You can use your mobile phone to make and receive phone calls while paired to your PACKTALK-S.

You can make a hands-free call using your mobile phone's voice dial option or using the Cardo speed dial or redial last call options.




To make a phone call:

- To dial using your mobile phone's voice dial option, press the middle **Media** button for **2** seconds or say "**Hey Siri**" (if you are using an iOS device) or "**OK Google**" (if you are using an Android device), then make your call as per the instructions for your mobile device.

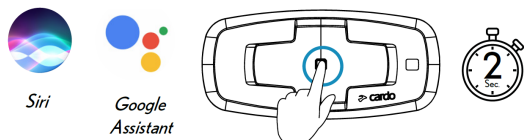


To redial a phone number:

- To redial the last number called on your mobile device. Press the middle **Media** button for **3** seconds or say "**Hey Cardo, redial number**".

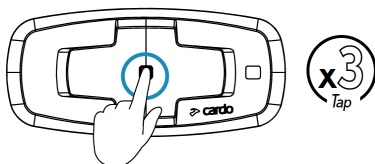


To set a speed dial number:

- On the Cardo Connect App, select **Phone**, then tap **SET+** and select a contact.

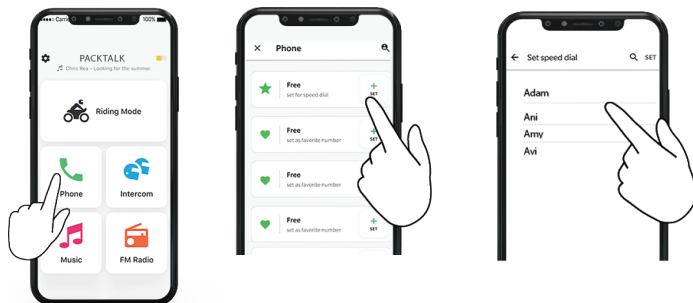

To call a preset speed dial number:

- Tap twice on the middle **Media** button.

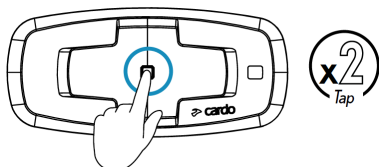


- If you connected two mobile phones to your unit, you cannot make an additional phone call from the other phone while a phone call is already active.
- During Bluetooth intercom 3 or 4-way calls, riders that are connected on both channels A and B cannot receive phone calls.




To answer a call:

- Tap the left **Media** button once, or say "**Answer**".

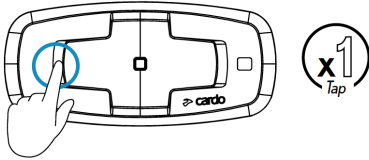


To ignore a call:

- Tap the **Volume -** button or say "**Ignore**".

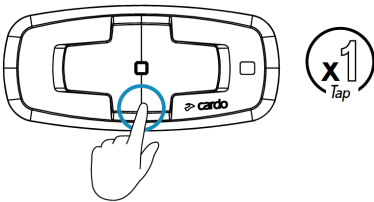

To end a call:

- Tap the left **Media** button, or say "**Hey Cardo, End Call**".

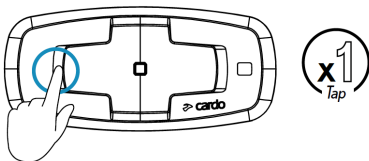


4.3 STREAMING MUSIC

You can stream music from your paired device to your PACKTALK-S.


To start music streaming from your paired device:

- Tap the left **Media** button or say "**Hey Cardo, music on**".

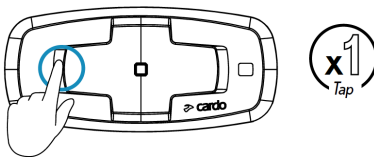

To stop music streaming:


- Tap the middle **Media** button or say "**Hey Cardo, music off**".

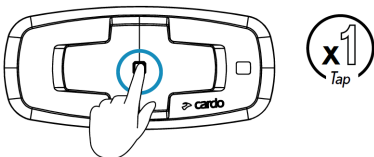




To skip to the next track (while streaming):

- Tap the left **Media** button or say "**Hey Cardo, next track**".

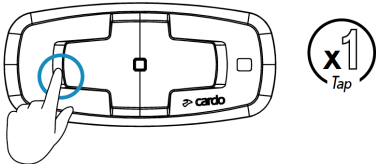


To skip back to the previous track (while streaming):

- Tap the **Intercom** button or say "**Hey Cardo, previous track**".

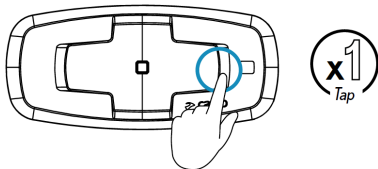


To share music with another rider:

- Press the **Volume +** button for **2** seconds or say "**Hey Cardo, share music**".

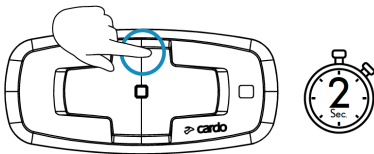

To toggle between FM and A2DP music:

- Press the left **Media** button for **2** seconds.

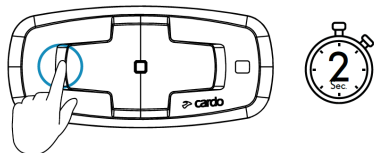


4.4 LISTENING TO FM RADIO

The PACKTALK-S is equipped with a built-in FM radio.

To turn on the FM radio:

- Tap the left **Media** button twice or say "**Hey Cardo, radio on**".

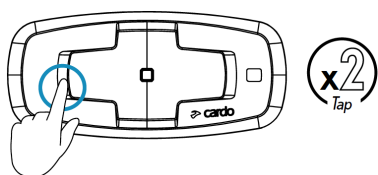




When you switch on your FM radio, the station that was playing when you last switched off resumes playing.


To turn the FM radio off:

- Tap the center **Media** button once or say "Hey Cardo, radio off".

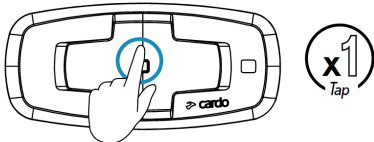


To skip to the next station:

- Tap the left **Media** button once or say "Hey Cardo, next station".

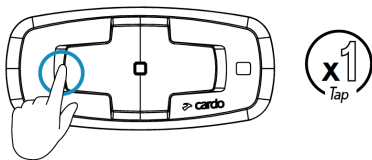


To skip back to the previous station:

- Tap the **Intercom** button once or say "Hey Cardo, previous station".

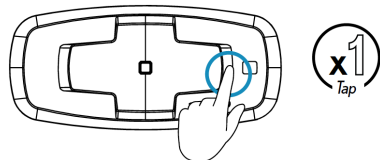


To scan for and select a station:

1. Tap the left **Media** button **3** times.
The FM radio plays each station that it finds for several seconds.

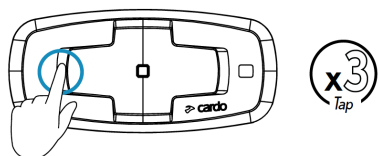


2. When you hear a station you want to select, tap the left **Media** button.

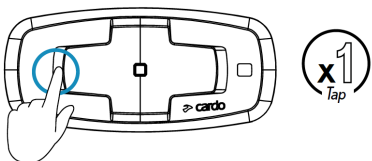




To store a scanned station in the active preset:

- Use the Cardo Connect App on your mobile device.

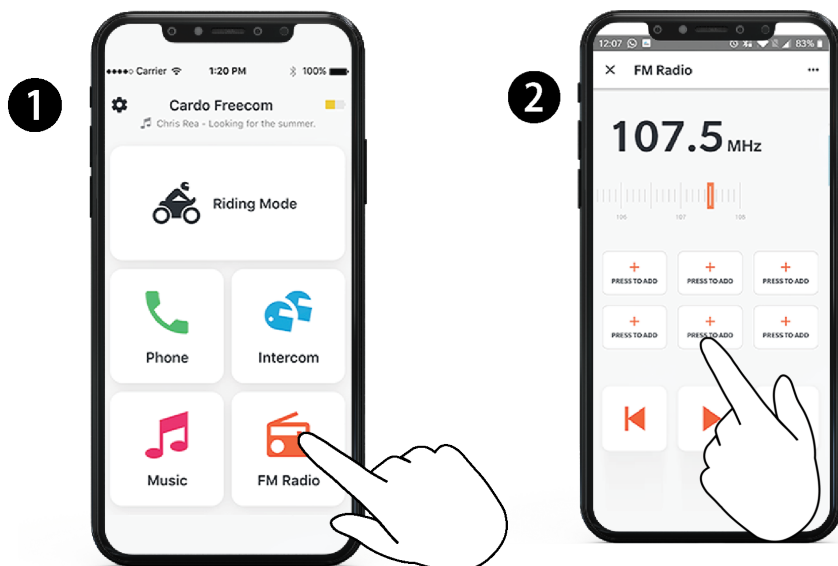

To switch source of audio between FM radio and music:

- Press the left **Media** button for **2** seconds.

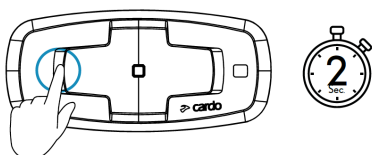

4.5 VOICE COMMANDS

You can use voice commands for hands-free operation of certain PACKTALK-S features. Voice commands use natural voice operation. You say a command and PACKTALK-S performs the action. Voice commands are available in various languages. English is the default language. You can change the language to another available language.

PACKTALK-S uses the following predefined voice commands.

To ...	Say ...
Answer an incoming call	"Answer"
Ignore an incoming call	"Ignore"
End a call	"Hey Cardo, end call"
Call the default number (configurable)	"Hey Cardo, speed dial"
Redial the last number	"Hey Cardo, redial number"
Turn on music	"Hey Cardo, music on"
Turn off music	"Hey Cardo, music off"
Play the next music track	"Hey Cardo, next track"



To ...	Say ...
Play the previous music track	"Hey Cardo, previous track"
To share music	"Hey Cardo, share music"
Turn on the radio	"Hey Cardo, radio on"
Turn off the radio	"Hey Cardo, radio off"
Skip to the next preset radio station	"Hey Cardo, next station"
Skip to the previous preset radio station	"Hey Cardo, previous station"
Open the call intercom (for Bluetooth Intercom)	"Hey Cardo, call intercom"
To close intercom call (for Bluetooth Intercom)	"Hey Cardo, end intercom"
Access Siri (when connected to an iOS device)	"Hey Siri"
Access Google (when connected to an Android device)	"OK Google"
Raise volume	"Hey Cardo, volume up"
Lower volume	"Hey Cardo, volume down"
Mute audio	"Hey Cardo, mute audio"
Unmute audio	"Hey Cardo, unmute audio"
Check the battery status	"Hey Cardo, battery status"



5. RIDING WITH OTHERS

Your PACKTALK-S features three distinct intercom communication modes: the traditional Bluetooth protocol, Live Intercom, and the Cardo's Dynamic Mesh Communications (DMC) technology.

DMC is the best way to communicate in a group. In DMC mode, you can instantly create or join a dynamically-fluid network of up to 15 riders to communicate in full conference mode. Unlike Bluetooth, DMC allows anyone in the group to roam freely, overtake each other or even leave the group altogether, without affecting the ongoing conversations of the remaining fellow riders. You can also use the DMC intercom to communicate privately with another rider.

Of course, you can still use Bluetooth to connect to devices, such as your smartphone or GPS, or to communicate with riders with headsets that don't include DMC technology. For details, see [Bluetooth Intercom](#) on page 21.

How Does DMC Work?

Anyone can start a new DMC group.

In DMC intercom mode, riders can join, leave, and rejoin existing DMC groups without affecting the ongoing conversation among the other group members. If a group member goes out of range, the remaining riders are automatically re-connected within split seconds to a closer group member, bypassing the absent or remote rider. This way, all active riders remain connected to each other.

5.1 DMC INTERCOM

You can use the DMC Intercom to speak with other riders in your DMC group. For more information on creating DMC Intercom groups, see [Creating DMC Intercom Groups](#) on page 18

Using the DMC Intercom, all riders in a group speak hands-free. A rider in a group performs no additional operation to speak to or hear other riders in the group.

Using the DMC intercom, you can also:

- Chat privately with another rider in your DMC group, see [Chatting Privately](#) on page 19.
- Bridge a non-DMC passenger or rider, see [Using DMC Intercom](#) on page 19.
- Mute/unmute DMC Intercom groups, see [Muting/Unmuting DMC Intercom Groups](#) on page 20.
- Leaving DMC Intercom groups, see [Leaving DMC Intercom Groups](#) on page 19.
- Listen to music while in DMC Intercom groups, see [Multiple audio sources and volume Management](#) on page 20.
- Switch between DMC Intercom and Bluetooth intercom, see [Switching between Intercom modes](#) on page 24.

5.1.1 SETTING UP AND USING DMC INTERCOM GROUPS

You can manage DMC Intercom groups to suit your riding requirements, this includes creating groups, joining groups, leaving and rejoining groups or changing your active group.

DMC Intercom groups are created by any rider in the group. Each group can have up to 15 riders.



When creating a group, all members should be within 5 meters (16 feet).

If your DMC group connection is lost, you remain part of the group. Once in range of any other group member, you automatically reconnect.

If your DMC group splits with some group members remaining in range of each other but not in range of all group members, you can continue speaking with the members still in range. Once in range of any other group member, you automatically reconnect.


If you join a new DMC group, you automatically leave your existing DMC group.

- If you purchased the PACKTALK-S DUO, the package contains two units belonging to the same DMC Intercom group. No group creation is required.

5.1.1.1 CREATING DMC INTERCOM GROUPS

When creating a DMC group, you must coordinate with the other riders who will be the group creator. When creating a group, all members should be within 5 meters (16 feet).

1. All the riders press the **Intercom** button for **5** seconds. The LED flashes red and green quickly.

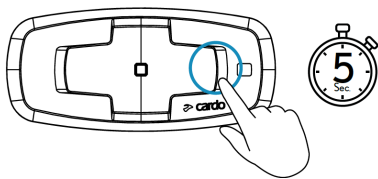


2. After each member joins successfully, the LEDs of the joined unit flash purple.
After grouping is completed, the DMC Intercom conference starts automatically.

5.1.1.2 JOINING DMC INTERCOM GROUPS

You can join or rejoin a DMC Intercom group previously created.

To join an existing DMC group:

1. The group admin allows the additional rider by selecting "Add a rider" in the Cardo Connect App.
2. Press the **Intercom** button for **5** seconds. The LED flashes red and green quickly.

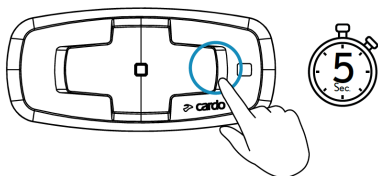

The color of the flashing LED indicates whether you have been added to the group:

- **Purple:** You have successfully joined the group.
- **Yellow:** You cannot join the group because it has already reached the maximum number of riders.
- **Red:** Failed to join.



5.1.1.3 LEAVING DMC INTERCOM GROUPS

You can leave a DMC group with Cardo Connect App or by doing a full factory reset.

If you leave a DMC intercom group, you must rejoin it if you want to connect to it again in the future.


5.2 USING DMC INTERCOM

5.3 ADDING A NON-DMC PASSENGER

You can use the DMC bridging feature to add a non-DMC passenger to the intercom group.

To bridge a non-DMC passenger:

1. To add a Bluetooth passenger, use the Cardo Connect App:

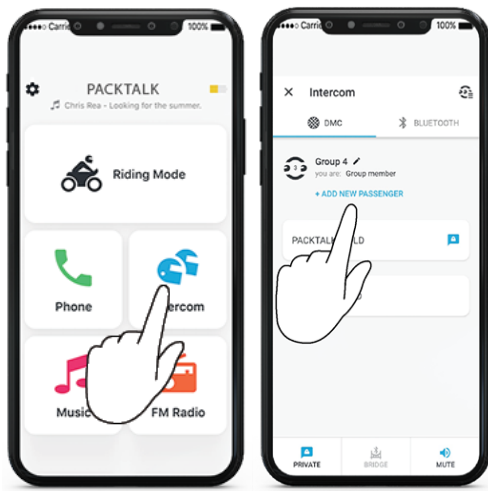


5.3.1 CHATTING PRIVATELY

You can chat privately with a specific member of your DMC group.


This option is also available using the Cardo mobile app.

To chat privately:

1. In the Mobile app, select the rider you want to speak to in private

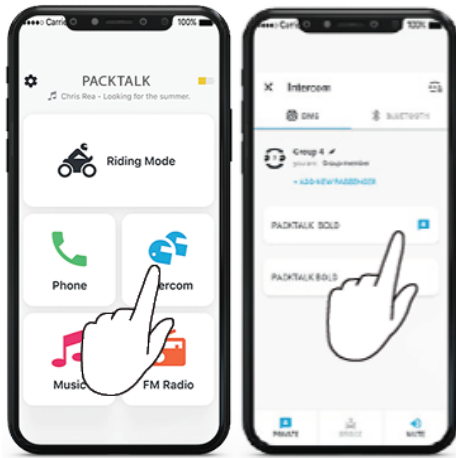

2. To start /stop a private chat, tap the **Volume -** and **Intercom** buttons once.

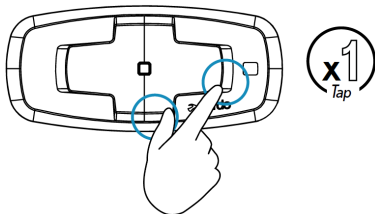


5.3.2 MUTING/UNMUTING DMC INTERCOMGROUPS

Muting the DMC Intercom mutes your microphone and speaker for the intercom group communication. Your microphone and speakers are still active for phone calls and music. Unmuting brings you back to the group conversation.

To mute/unmute the DMC group:

- Tap the **Volume +** and **Volume -** buttons.

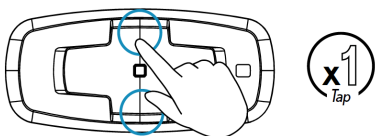


5.3.3 TO START/STOP SHARING A CALL:

To start/stop sharing a call:

To share a phone call with the riders in the DMC group press the **Volume +** button for **2** seconds.

All the riders can participate in the phone conversation.

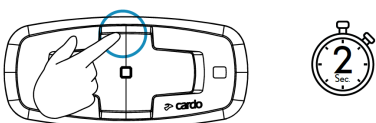

5.3.4 MULTIPLE AUDIO SOURCES AND VOLUME MANAGEMENT

The PACKTALK-S can use parallel audio streaming to stream audio from two connected sources simultaneously, so that you can listen to your music or the FM radio while holding a DMC



Intercom conversation. PACKTALK-S automatically manages your music and FM radio volume while using DMC Intercom. PACKTALK-S also automatically manages DMC Intercom volume with mobile phone calls and GPS. For more information on background audio level and audio source priorities, see [Using Parallel Audio Streaming](#) on page 27.

5.4 BLUETOOTH INTERCOM

To connect your unit to another unit with a Bluetooth intercom, such as a Cardo Bluetooth unit or other Bluetooth-enabled devices, you must first pair their channels. Once paired, the unit automatically recognizes the other one whenever they are in range.

- Pairing a channel replaces any existing paired unit on that channel with the new unit.
- If you purchased the PACKTALK-S DUO, the retail package contains two pre-paired units.
- The Intercom range with other models is limited to the distance of the unit with the shorter range.

5.4.1 SETTING UP NON-DMC INTERCOM


DMC is always the best way to connect a group of riders. If you happen to ride with a group of riders that do not have DMC devices (such as Bluetooth communicators by Cardo or by other brands), you can switch your unit to Bluetooth mode and create or join a non-DMC group. The participating riders are connected in a chain with a maximum total of four riders.


To set up a non-DMC intercom (Cardo or non Cardo) :

1. Confirm your Cardo unit is in Standby Bluetooth intercom mode (LED flashes blue slowly).
If your unit is not in Bluetooth intercom mode, use the Cardo Connect App. Select intercom, then Bluetooth Mode. For more information see, [Switching between Intercom modes](#) on page 24.


Universal Bluetooth Intercom for non-Cardo units: a non-Cardo unit should be on phone pairing mode.

2. To initiate 2-way pairing:

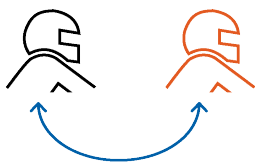

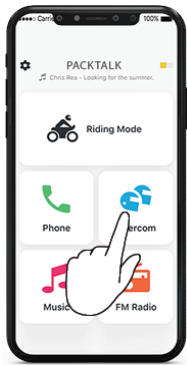

Select Intercom

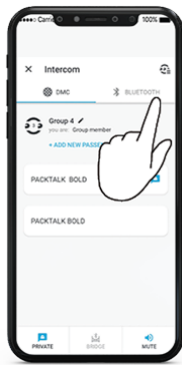



Switch to Bluetooth mode




Select the Bluetooth rider

Bluetooth intercom pairing needs to be initiated on the other device.

3. To add a 3rd rider:

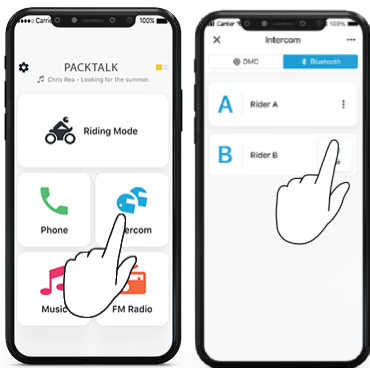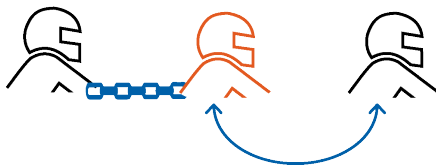


- Press the **Intercom** button for **5** seconds. The LED flashes red.

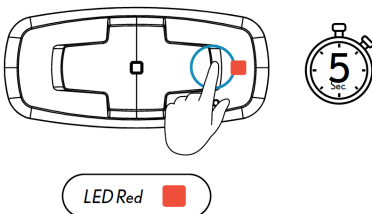

Bluetooth intercom pairing needs to be initiated on the other device.




4. To add a 4th rider, Rider 1 or Rider 2 connects to the additional rider.

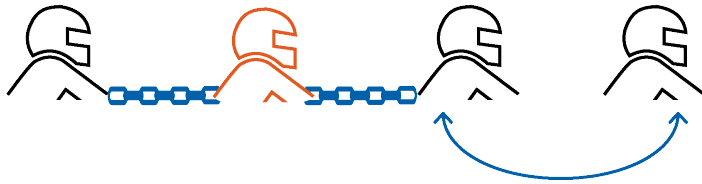

5.4.2 USING THE BLUETOOTH INTERCOM


5.4.2.1 STARTING/ENDING BLUETOOTH INTERCOM CALLS

To start or end communication with a rider:

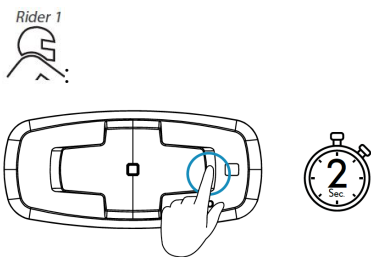

To start or end communication with Rider 2:

- Press the **Intercom** button for **2** seconds or say "**Hey Cardo, call intercom**" or "**Hey Cardo end intercom**"

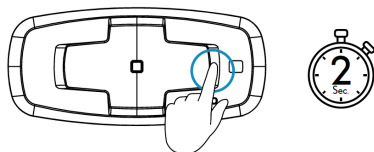

5.4.2.2 RECEIVING BLUETOOTH INTERCOM CALLS

If another paired unit calls you via Bluetooth intercom, the call begins instantly.




5.5 SHARING MUSIC

You can share music with a passenger.


- Music can be shared with only one passenger.
- Bluetooth intercom calls are disabled when sharing music.
- If you paired your unit to two mobile phones, music will be shared from the mobile phone through which you last played music.
- When you stop sharing music, the music continues to play on your unit only.

To start sharing:

1. Set a sharing partner using the Cardo Connect App:

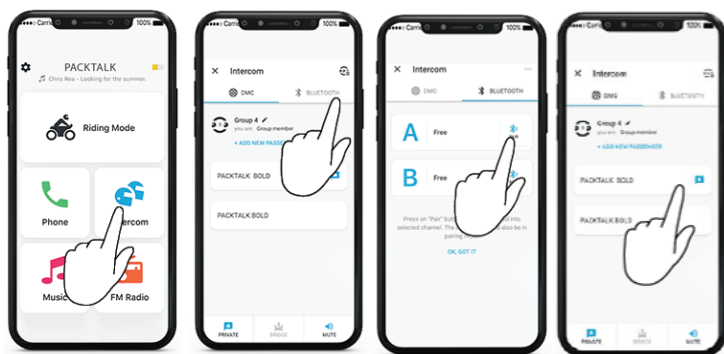


2. Start playing music.
3. Press the **Volume +** button for **2** seconds to start sharing .

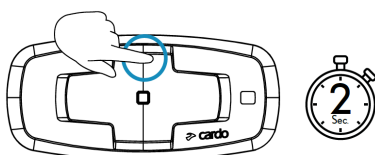

To stop sharing:

- Press the **Volume +** button for **2** seconds.

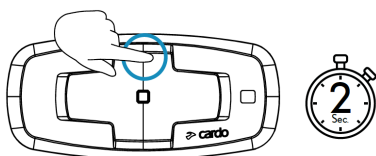

5.6 SWITCHING BETWEEN INTERCOM MODES

Your PACKTALK-S unit can work in only one intercom mode at a time.


The current intercom mode is indicated by the color of the LED:

- When in DMC intercom mode, the LED flashes green at approximately 4-second intervals.
- When in Bluetooth intercom mode, the LED flashes blue at approximately 4-second intervals.



To switch between intercom modes:

- Use the Cardo Connect App.

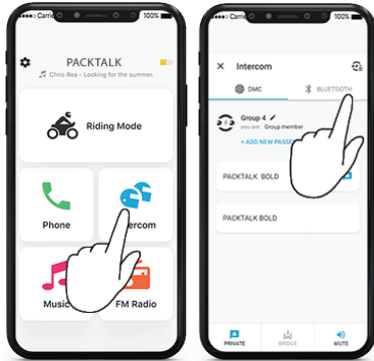

The color of the flashing LED changes and a voice message indicates the current intercom mode.




6. TROUBLESHOOTING

6.1 SOFT RESET

If your PACKTALK-S stops responding, reset it in one of these ways:

- Turning it off and then on again (see Switching Your Unit On / Off).
- Rebooting the unit, by simultaneously pressing the left **Media** and the **Intercom** buttons for **10** seconds.

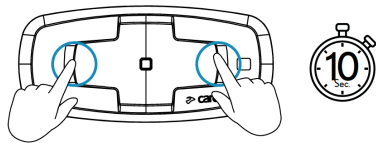


6.2 RESET TO FACTORY SETTINGS

This option deletes all paired units, devices and all configuration settings.

To perform a factory reset through the unit:

1. Check that your PACKTALK-S is in Standby mode.
2. Simultaneously press the left and middle **Media** buttons and the **Intercom** button for **5** seconds.

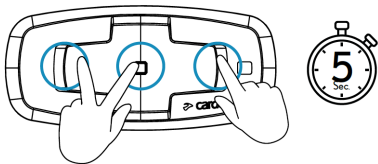

The LED flashes red **5** times.

3. A factory reset can also be performed with the Cardo Connect App.

6.3 FAQ

Additional answers to common problems can be found at www.cardosystems.com/support/packtalk-s.



7. PERSONALIZING YOUR DEVICE

Get the most out of your PACKTALK-S by changing the settings and customizing your unit according to your own personal preferences, using the Cardo Connect App on iOS or Android devices.

7.1 USING PARALLEL AUDIO STREAMING

With parallel audio streaming, you can hear GPS instructions during a mobile or Bluetooth intercom call, or while listening to other audio sources, such as music or FM radio.

- Parallel audio streaming may not work properly with some iOS devices (i.e., music player or GPS navigator) due to connected device limitations.
- In some cases, parallel audio streaming may not work properly due to connected device limitations (music player or GPS navigator).
- Cardo recommends that during a 3-way or 4-way Bluetooth intercom conference call, the rider who is connected to only one intercom call listens for mobile phone and GPS announcements.
- You cannot use music sharing for voice audio with riders during parallel audio streaming.
- Music can be streamed in the background during an active DMC intercom call.



8. SUPPORT

For additional information:

 www.cardosystems.com/support/packtalk-s

- To avoid potential problems and to receive our support and warranty coverage, we strongly recommend buying our products only from authorized Cardo dealers.
- Your favorite brick-and-mortar store is always your best bet. Unauthorized online resellers and online auction sites such as eBay are not among Cardo's authorized dealers, and purchasing our products from such sites will be at your own risk. Cardo strives to provide quality products and exceptional customer service. We select dealers who share that vision. Buying grey market items from unauthorized online dealers is counterproductive and also adversely affects unsuspecting online consumers who may be purchasing used, counterfeit or defective products or devices whose warranties are void. Protect your investment by purchasing genuine Cardo and scala rider® products only from authorized dealers.

© 2026 Cardo Systems

All rights reserved. Cardo, the Cardo logo and other Cardo marks are owned by Cardo and may be registered. All other trademarks are the property of their respective owners. Cardo Systems assumes no responsibility for any errors that may appear in this document. Information contained herein is subject to change without notice.